

# VITA | Fireplaces

North American Designed & Manufactured by **CF + D** | custom fireplace design



## **MONROE | Wall-Mount**

Fireplace with Vapor-Fire Burner

## **INSTALLATION | OWNER'S MANUAL**

Serial #

**Read full manual before installation and keep all instruction for future use**

4/9/19

**CF + D** | custom fireplace design  
[www.customfireplacedesign.com](http://www.customfireplacedesign.com)

# Table of Contents

## **APPENDIX A - VITA | Fireplaces Installation**

Important Instruction.....	Page A
General Information.....	Page B
Installation Requirements.....	Page C
a) Installation Requirements	
b) Required Tools	
c) Description	
Fireplace Specifications.....	Page D
Exploded Parts Diagram.....	Page E
General Layout Example.....	Page F
Mounting Plate Installation.....	Page G
Connecting the Flue to the Main Body Assembly Instructions.....	Page H
Mounting the Fireplace.....	Page I
Connect the Power Supply.....	Page I
Door Installation Instructions.....	Page J
Electrical Instructions.....	Page K
Plumbed-In Instructions.....	Page K
Initial Fill Instructions.....	Pages K - L
Manual Fill Instructions.....	Page M
Warranty Statement.....	Page N

## **APPENDIX B - Vapor-Fire Service Manual.....Pages I - 15**

# VITA | Fireplaces Installation

CF + D

custom fireplace design

Quality

Creativity

Innovation

## A Letter from Our President:

Our entire team joins me in thanking you for purchasing the MONROE | Wall-Mount fireplace, part of our exclusive line of VITA | Fireplaces featuring Vapor-Fire burner technology, North American designed and manufactured by CF + D | custom fireplace design. We are proud of our quality workmanship, our creativity in designing functional art pieces and our commitment to technical innovation. We welcome the challenges that come across our designer's desks, keeping our creative minds working on developing new ideas with our clients to build their dream fire feature.

Upon receiving this letter your VITA Fireplace has now been shipped and received. The installation, technical and service manuals are included in the package and our Technical Team is available with assistance throughout the installation and start-up of your new VITA fireplace.

The Management, Designers and our Metal Craftsman, thank you again for the opportunity of being a part of your project. We value our clients greatly and are available for consultation before, during and after the installation of your exclusive VITA fireplace.



Vince Volpe  
President and CEO  
**CF + D** | custom fireplace design

**CF + D** | custom fireplace design  
5230 Harvester Rd. Unit #2 Burlington, Ontario Canada  
L7L 4X4 t. 1-866-909-3070 t. 905-681-3070  
[www.customfireplacedesign.com](http://www.customfireplacedesign.com)

1/22/19

# APPENDIX A - Important Instructions

**IMPORTANT:** Read all instructions before installation.

1. Not for use outdoors.
2. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock.



3. **DO NOT** block air intakes or exhaust in any manner.
4. **DO NOT** use in area where gasoline, paint or flammable liquids are used or stored.
5. **DO NOT** burn wood or other materials in this model.
6. Always **USE A CERTIFIED ELECTRICIAN** should new circuits or outlets be required.
7. **DISCONNECT THE POWER SUPPLY BEFORE DOING ANY CLEANING, MAINTENANCE OR RELOCATION OF THE MODEL.**



8. To disconnect the model, turn the controls off and disconnect the power at the service panel.

## **Vapor-Fire Burner:**

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference.

Construction and electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electric shock and injury to persons.



A dedicated 15 Amp, 120V GFCI is required for electrical.

9. Tethered Bluetooth control boxes are connected before shipping to ensure proper operation. Also used to sync the remote control for remote operated units. Make sure they are all firmly plugged in for the unit to work properly. They may have become loose during shipping.



**NO NOT REMOVE OR DISCONNECT THE TETHERED BLUETOOTH DEVICE FROM INSIDE THE UNIT.** It has been factory set to ensure proper operation.

# General Information



**KEEP THIS MANUAL HANDY FOR EASY REFERRAL.  
All WARNING and CAUTION SHOULD BE STRICTLY OBSERVED.**

Please read this entire manual before you install and use your VITA | Fireplaces Vapor-Fire Feature.

Failure to follow the instructions may result in property damage, bodily injury or even death.

When this fire feature is not properly installed, a fire may result. To reduce the risk of fire, follow the installation instructions.

This service bulletin is to serve as a guide to the installation and operation of your fireplace system. It is not intended to replace skilled trades and/or expertise that may be required to perform installations.

All electrical and electronic components must be installed, inspected and tested by qualified persons in accordance with local building codes.

Components described herein are intended as an indication of the components required and/or supplied and is not an exhaustive item listing.

All standard safety practices as indicated by local codes, laws, or OSHA standards must be followed to prevent accident or injury.

Some of the components supplied cannot be installed by a single person nor should they be installed from a ladder.

All site safety arrangements are the responsibility of the Site Supervisor, General Contractor and/or Fireplace Installers, and not CF + D.

**USING MAKE-SHIFT COMPROMISES DURING INSTALLATION CAN CAUSE DAMAGE.** Such installation is not covered under CF + D limited warranty.

**DO NOT CONNECT TO ANY AIR DISTRIBUTION DUCT OR SYSTEM!**

CF + D specializes in creating one-of-a-kind, hand-made artistic fireplaces. While these fire features are generally developed for their aesthetic presence they are also a functional appliance. As such, natural variations in the material forming processes and patina are part of the sculptural spirit of the fireplace, adding to the beauty and uniqueness of the design.

North American Designed and Manufactured by **CF + D** | custom fireplace design

**VITA** | Fireplaces

4/9/19

# Installation Requirements

## INSTALLATION | OWNER'S MANUAL MONROE Wall-Mount Fireplace with Vapor-Fire Burner

### A) Installation Requirements

- Prepare wall for the installation of the fireplace (see *General Layout Example Page F*).
- Electrical 15 AMP Service 120V GFCI at wall ready for the wall mounting plate placement for connecting to the junction box.
- If the client has chosen the option of continuous water, a plumbed-in 1/2" water line for continuous water flow from the wall is required which will connect to the 1/4" plumbing line and shut-off valve. The water shut off is located at the plumbing connection. (See *Fireplace Specifications Page D*).
- For manual fill operation, one water container will be supplied with the unit for manual refilling. (See *Manual Fill Instructions Page M*)

### B) Required tools

- Drill
- M8 Allen key
- Level
- Screw drivers
- M12 Allen key
- Scaffolding if necessary
- 2 persons minimum are required for installation.




### C) Description

Fireplace Body Weight	Wall-Mount: 150 lbs.
Flue Measurements	Pipe: 7" X 9" Cover: 8" X 10"
Flue Length	Made to specification
Fireplace Body Width	31"
Number of Glass Panels	1
Flue Weight	11 lbs. per foot
Wall Mount Plate (See <i>Figure 2</i> )	Must be installed a minimum of 18 1/2" from the floor to the bottom edge of the mounting plate

# Fireplace Specifications

## MONROE | Wall-Mount

### Sample

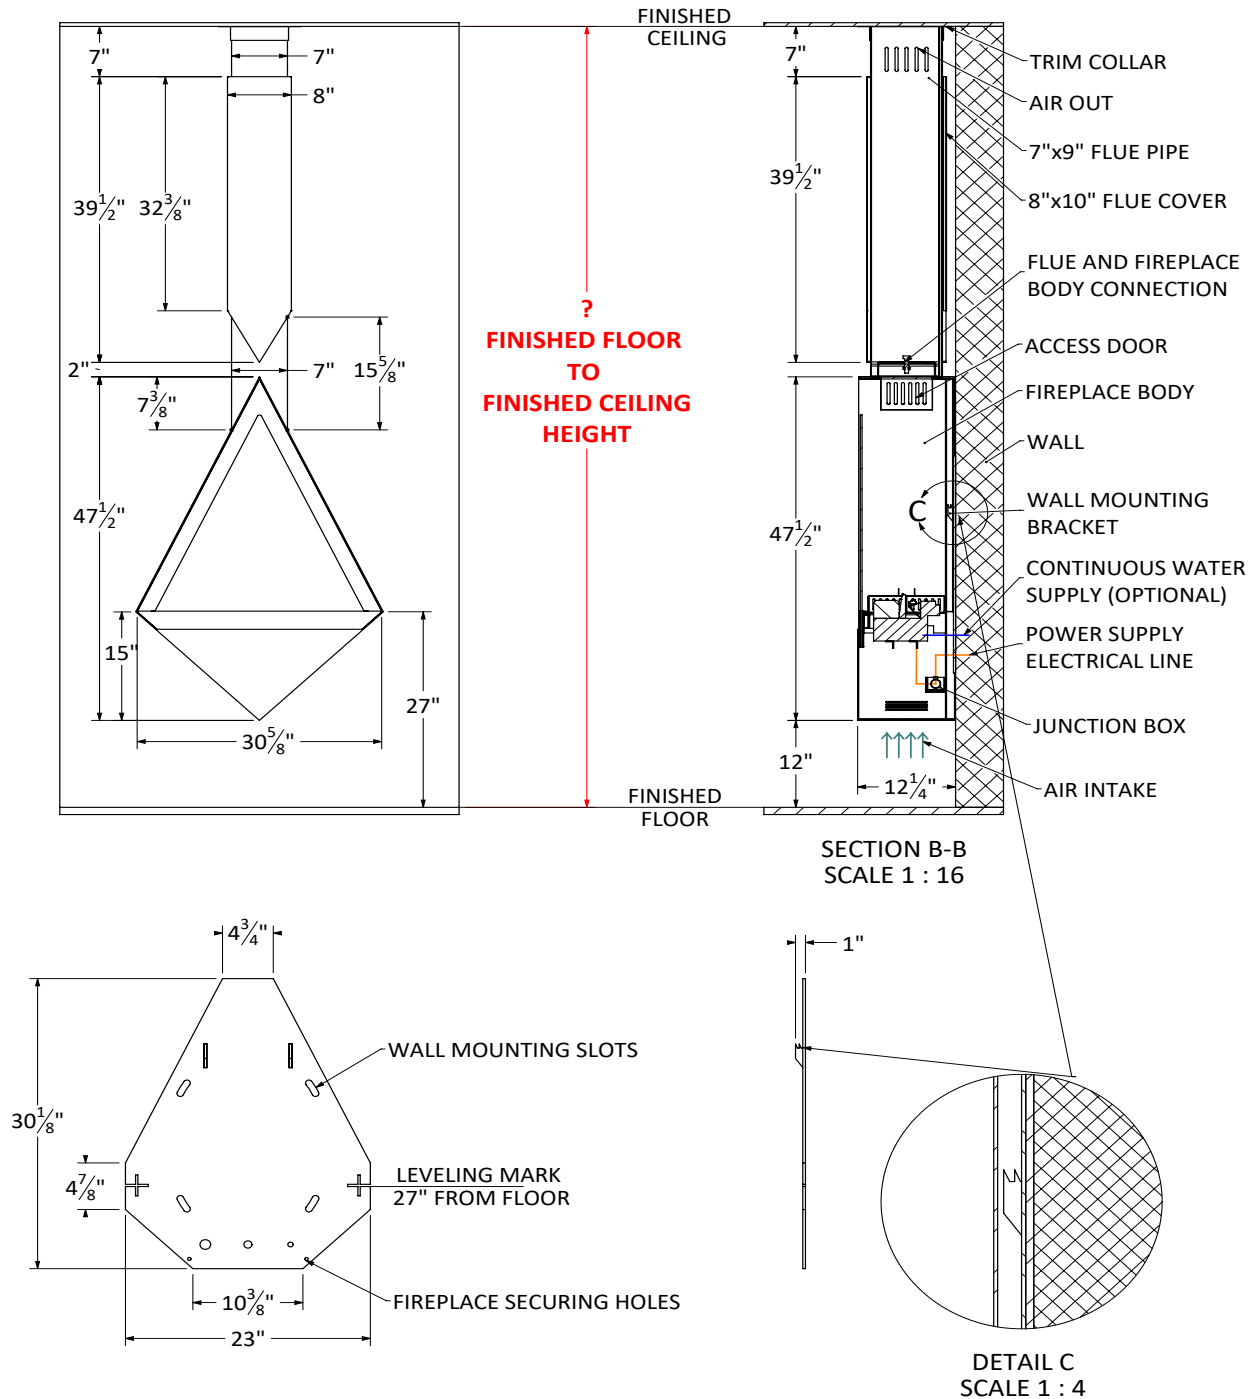


Shown with Standard 9 ft. Flat Ceiling Application  
with Vapor-Fire  
Custom Lengths Available

VITA | Fireplaces

4/9/19

# Exploded Parts Diagram

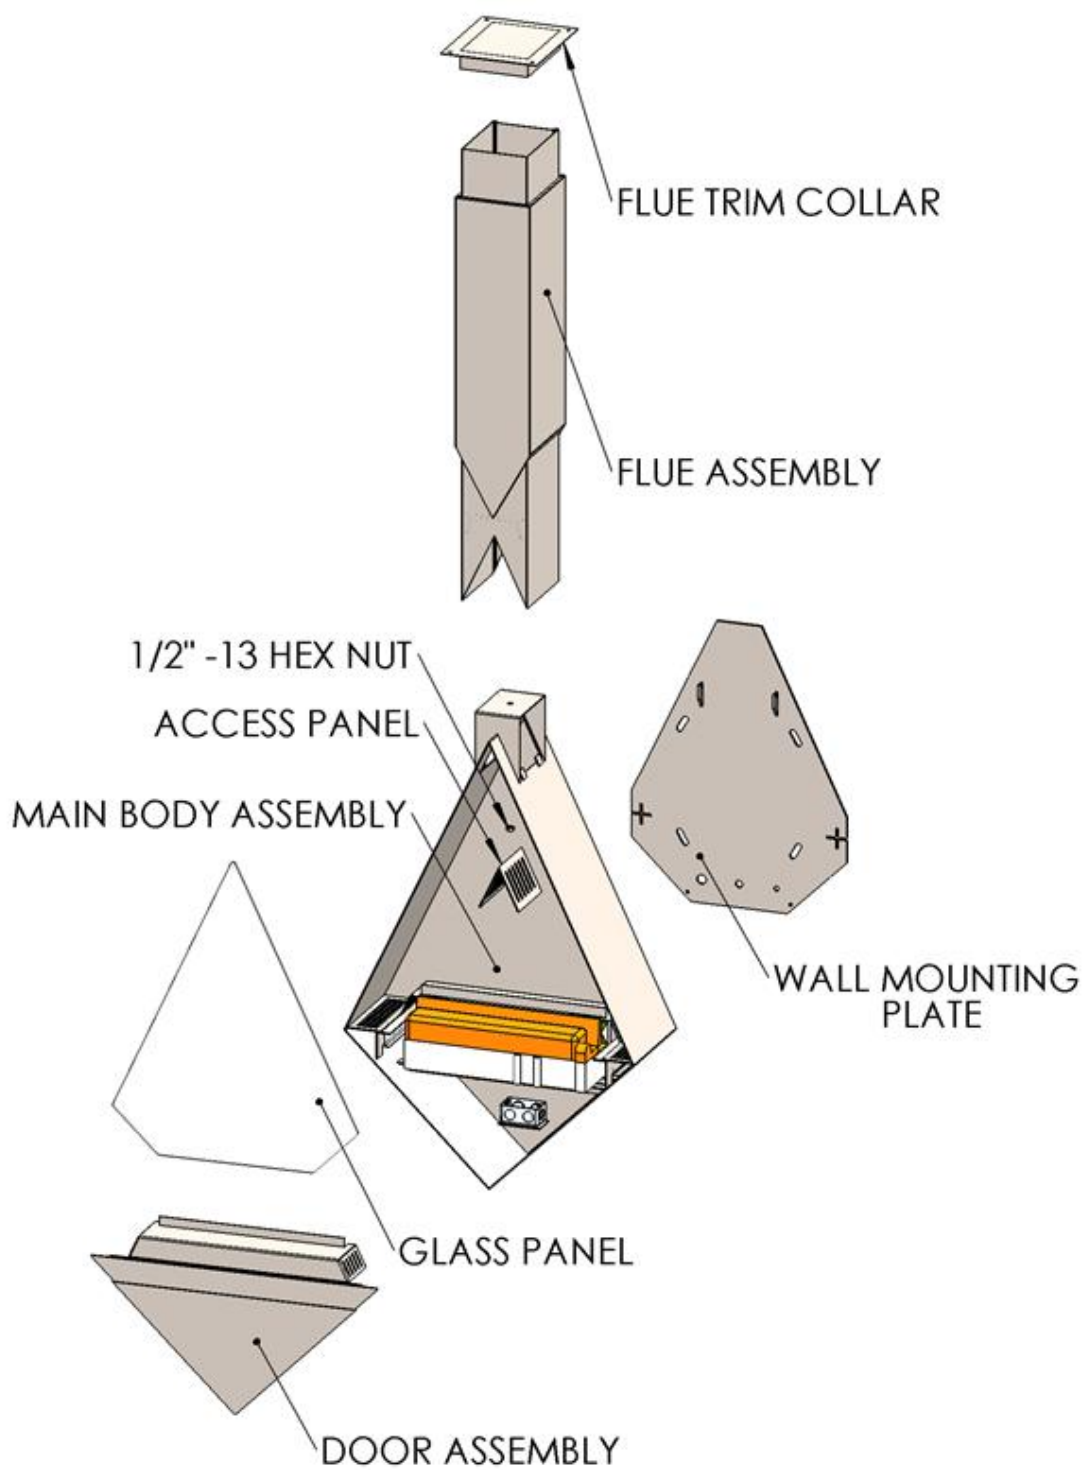

**Note:** All dimensions are in inches.


**VITA** | Fireplaces

4/9/19



## General Layout Example

Figure I

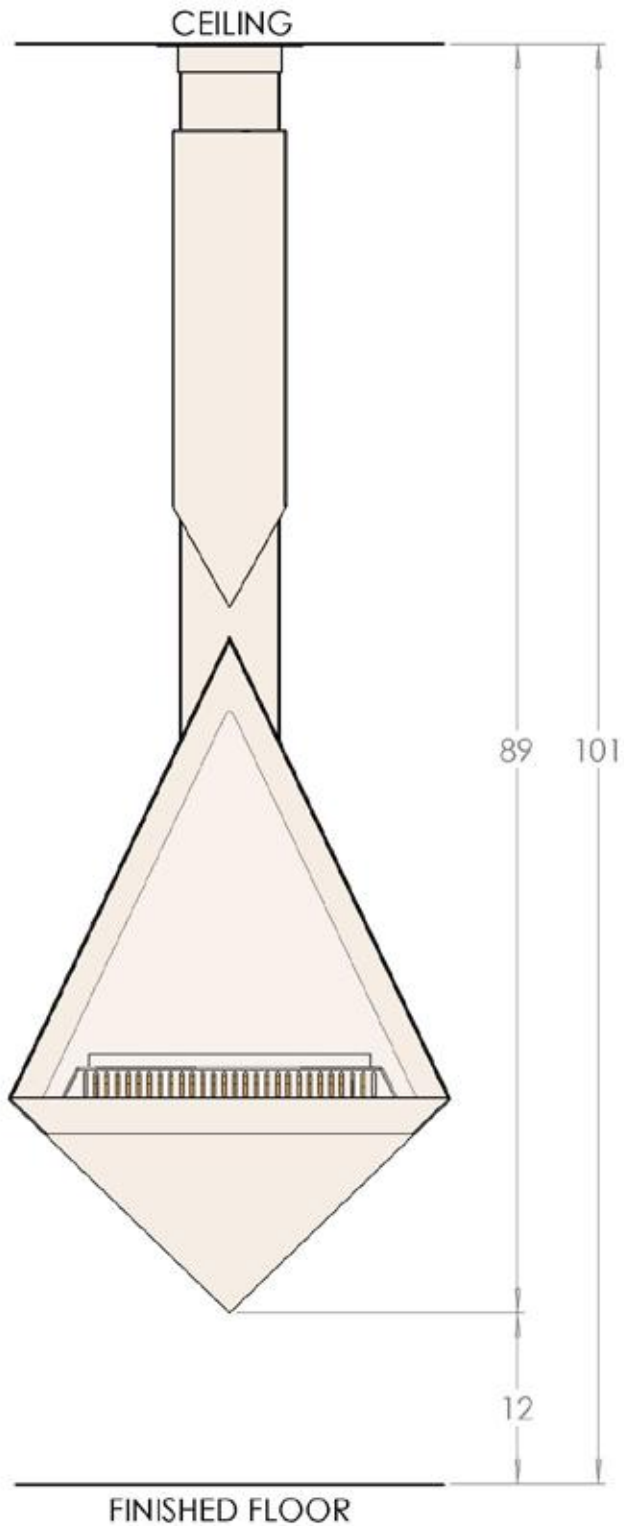

**NOTE:** Finished floor to ceiling height may vary according to project specifications.

**VITA** | Fireplaces

4/9/19

# Mounting Plate Installation

## Install the Mounting Plate

Determine the desired location for the mounting plate. To ensure the fireplace is a minimum of 12" from the finished floor the mounting plate should be installed so that the bottom edge of the plate is 18 ½" from the finished floor (Figure 2).

Confirm all height dimensions shown in the layout drawing (Figure 1) before installing the mounting plate.

Guide the 120V with GFCI 15 Amp power supply through the power supply pass through. Also, guide the water line through to prepare for the plumbing connection (if the client has chosen a plumbed-in system option).

Attach the mounting plate using the appropriate ½" lag bolts (not provided) for the on-site substrate.

Bolts must be attached to structure capable of supporting 250 lbs. minimum.

Ensure the mounting plate is plumb (straight), level and secure before proceeding to the next step.


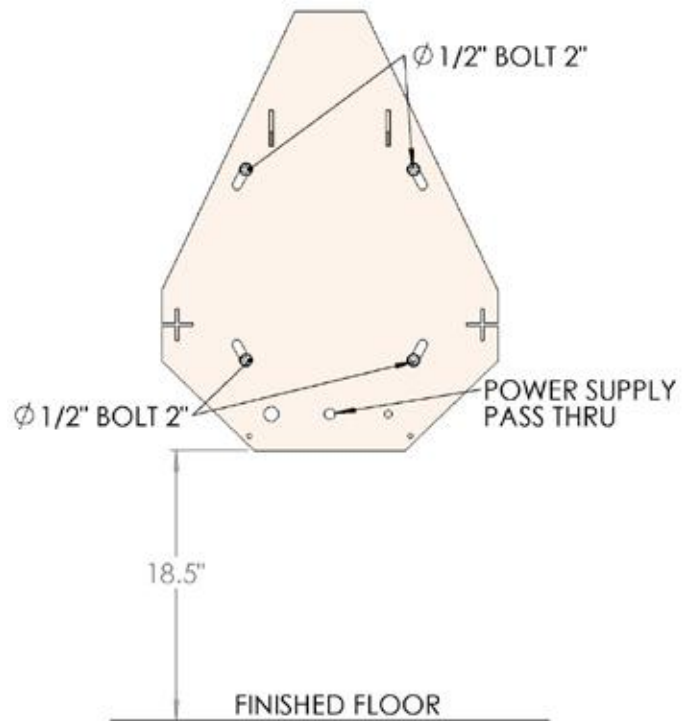


Figure 2



# Flue | Main Body Assembly Instructions

## Connect the Flue Assembly to the Main Body assembly

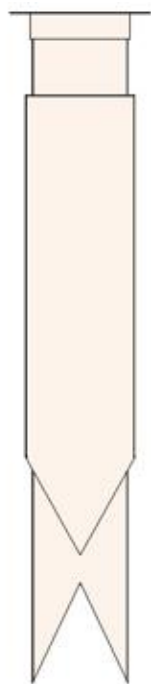

Remove the access panel from the main body. Slide the flue on top of the main body so the threaded rod aligns with the upper bracket (Figure 3).

Secure the flue assembly to the fireplace body with the  $\frac{1}{2}$ " hex nut and washer (supplied) onto the treaded rod (Figure 4).

Install the access panel with the four #10-24 screws (supplied).

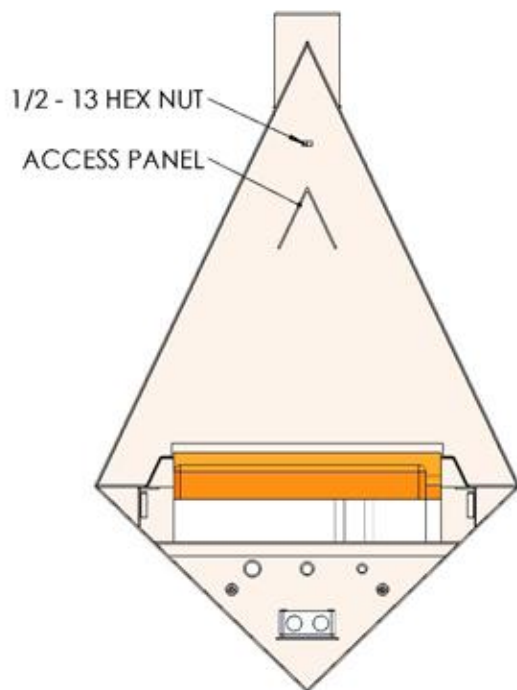


Figure 3

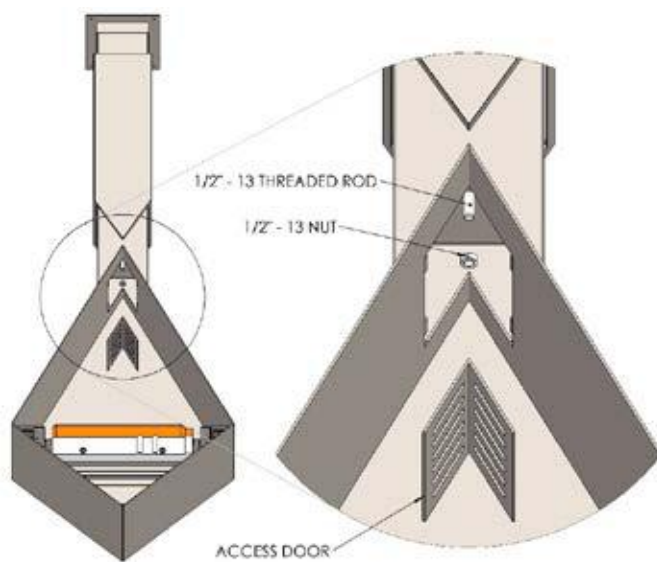


Figure 4

# Mounting | Power Supply Instructions

## Mount the Fireplace

Lift the fireplace into position. Align the cleats on the mounting plate with the corresponding slots on the back of the main body and lower into place. The fireplace will have a  $\frac{1}{8}$ " gap between the wall and the main body (Figure 5).



This operation requires multiple people.

Guide the power supply through main body and the plumbing line (if the plumbed-in option is chosen).

Install the  $\frac{3}{8}$ " set screws (supplied) through the main body into the holes on the mounting plate.

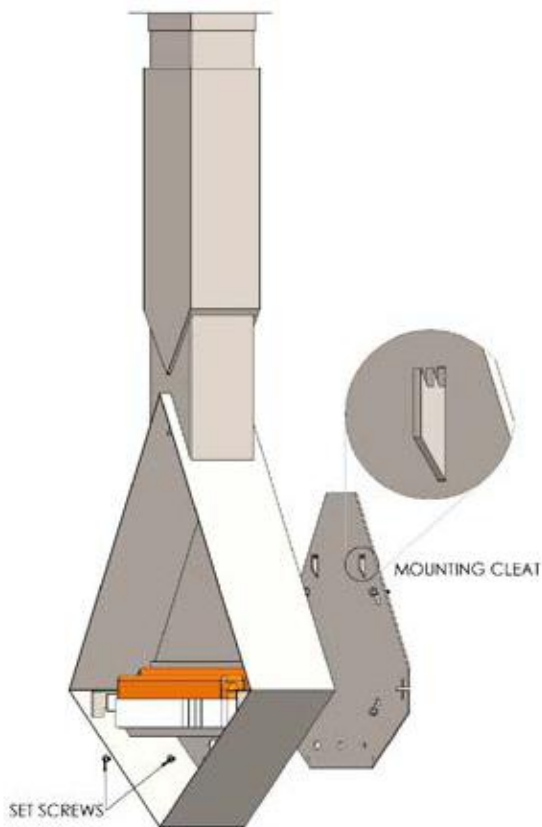


Figure 5

## Connect the Power Supply

Connect the 120V with GFCI 15 Amp power supply with switch to the junction box in the lower portion of the main body. (Figure 6)

### For Plumbed-In VITA Fireplaces:

Connect your  $\frac{1}{2}$ " plumbing line to the supplied  $\frac{1}{4}$ " connection (supplied) if this option is chosen.

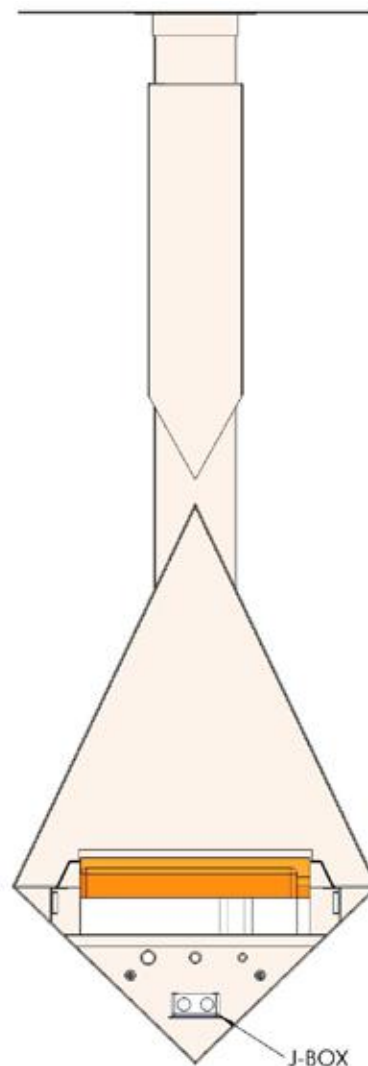


Figure 6

VITA | Fireplaces

4/9/19

# Door Assembly | Glass Installation

## Install the Door Assembly



This operation requires multiple people.

Move the door assembly into position and align the door glides on each side of the main body and the door assembly (Figure 7).

Slide the door assembly into the closed position to engage the door glides. Once engaged the door will open 4" from the main body. Ensure both left and right glides are engaged before proceeding.

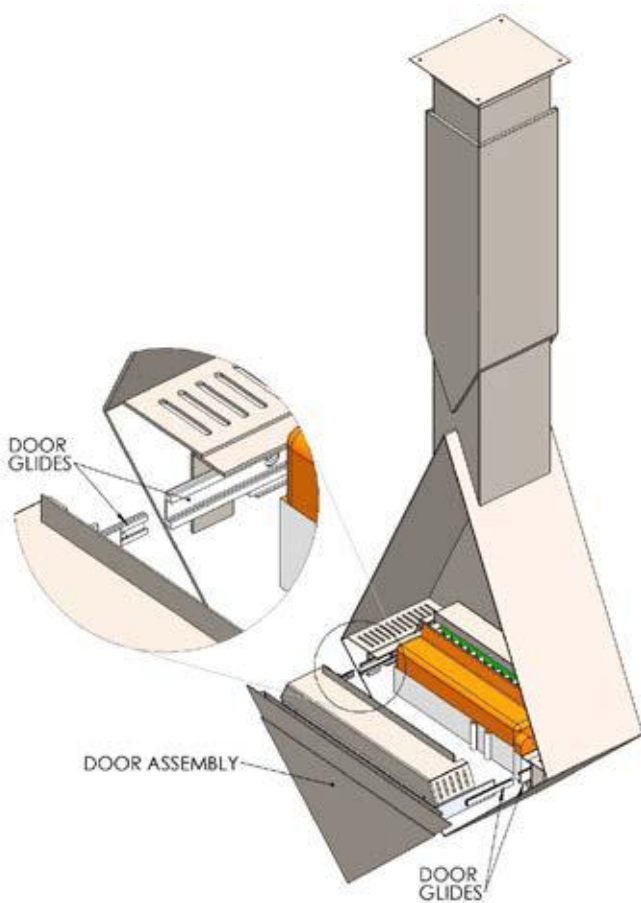


Figure 7

## Install the Glass

With the door assembly secured to the main body, open the door and place the glass panel into the provided slot (Figure 8).

Once the glass is in place, close the door assembly by pushing it firmly into the main body. The door assembly will be opened and closed to remove and replace the water reservoir for re-filling.



Use caution when manipulating glass to prevent injury. Do not apply any force on the glass as this may cause breakage.

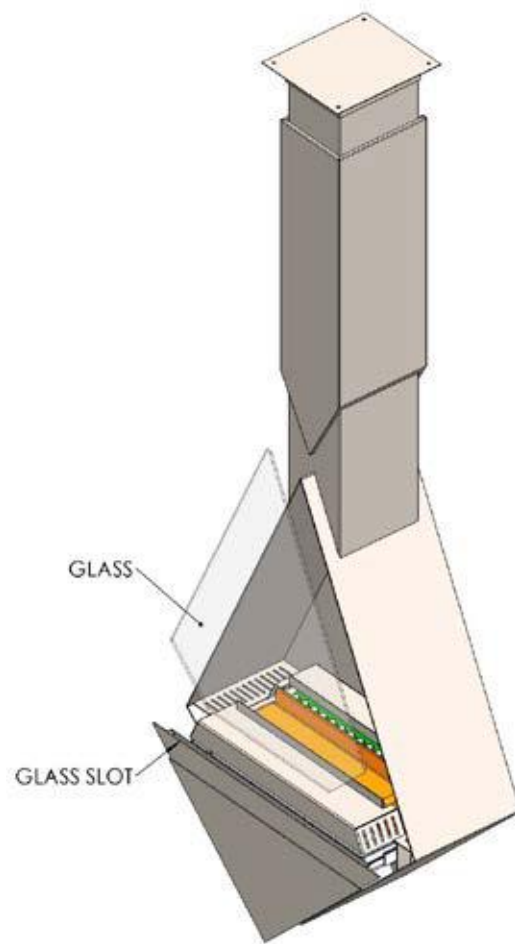


Figure 8

# Electrical | Plumbed-In Instructions

## Electrical Installation



**NOTE:** All electrical to be completed first. **Do not** turn on electrical until plumbing has been completed.

The electrical and 1/4" plumbed connection is supplied.

The electrical connections are to be located at the wall where the fireplace will be mounted. The junction box is located in the fireplace body below the Vapor-Fire burner assembly (See Figure 6).

A dedicated circuit is required for the junction box. Connect field power 120V GFCI wire, 15 AMP service to the wires located in the junction box.

Be sure to include an on/off switch (*on the wall is recommended*) into your power supply to control the system.



**NOTE:** Make sure the Vapor-Fire burner power is off before connecting.

## Instructions for Continuous Plumbed-In Systems

- The plumbing accessory kit is designed for use with copper piping.
- Ensure that all plumbing connections meet local plumbing code requirements.
- Ensure that the location of the plumbing connection allows for easy access for shut-off during scheduled maintenance.

Normal tap water can be used in the Vapor-Fire as long as the tap water is not considered to be hard water. In the event your tap water is hard, softened water is recommended.



**NOTE:** Plumbing connections should be done by an experienced plumber familiar with plastic tubing and connectors.

Downsize the 1/2" plumbing line to 1/4" tube and connect to valve (1/4" *supplied and connected to burner before shipping*) which is located in the bottom corner of the burner on the bottom of the fireplace body. Test for water leaks and make sure connections are leak proof.

Access the Vapor-Fire burner to complete the initial fill process by sliding out the door assembly.

## Vapor-Fire Burner

Slide the door assembly out to access the burners (See Page J). The Vapor-Fire burner is factory set and ready for the initial fill. Confirm that all electrical and plumbing have been completed before proceeding to the next step.

## Initial Fill Instructions

There are two ways to complete the initial fill. Both are acceptable whether you have chosen the plumbed-in or manual fill options.

Each VITA Fireplace is supplied with an orange initial fill bottle which is used for the initial fill (*plumbed-in option*), and/or on a regular basis (*manual fill option*).



# Initial Fill Instructions (continued)

## Option 1: Fill the reservoir directly

Remove the plumbing fill cap assembly by gently twisting clockwise and move cap to side (*images A & B below*). For manual fill VITA | Fireplaces, there will not be a plumbing fill cap assembly present.



Remove top cover assembly on the burner by depressing side tabs gently (*images 1 and 2*).



It is now time to fill the water reservoir(s) with 33.5oz (1L) of water. Take note of water level markers (*image 3 below*). Be sure to fill water level in between the markers so that the system can learn the proper level to maintain during operation.




Replace the assembly making sure that clips are secure and connect the plumbing fill cap assembly (*if applicable*).

**NOTE:** this method does not use the orange initial fill bottle.

## Option 2: Fill the reservoir using the Initial fill bottle

If you have chosen the plumbed-in option, remove the plumbing fill cap assembly (*as outlined - left*). If your VITA fireplace uses the manual fill option, there is no plumbing fill cap assembly.

Fill the orange initial fill container with regular tap water and secure the cap without twisting too tightly. Replace the container into the tray with the valve facing downwards as shown below. The valve fits gently into the socket used for the plumbing fill cap assembly (*see image B*). No need to tighten.

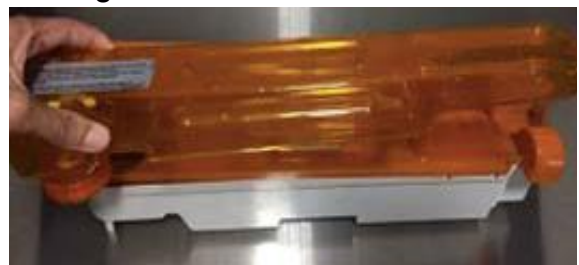

VITA | Fireplaces

4/9/19

# Manual Fill Instructions

Allow the water to drain into the reservoir through the valve. You will hear a gurgling sound. Once the water stops draining into the reservoir below, the sound will stop. This means that the vapor-fire reservoir has filled to the optimal level.

**NOTE: For plumbed-in option replace the plumbing fill cap assembly. For manual fill Vapor-Fire, re-fill the initial fill bottle and keep for regular operation.**

**For manual fill containers, re-fill the initial fill bottle and keep for regular operation.**



**DO NOT** attempt to test fire the system until all plumbing and electrical is completed and the correct starting water level has been established. Failure to follow this instruction could incorrectly cause overflow during operation.

- After the plastic container is empty or stops flowing into the reservoir, it has now filled to the level required
- Refill the container with water and replace into position. The maximum operating cycle time will be between 8 to 10 hours.
- Slide the door assembly forwards to close the unit. Ensure that all edges are flush and snug.

Proceed to turn on the Vapor-Fire fireplace.



**NOTE:** If after the test fire stage, the unit will be turned off to complete construction, it is recommended to first drain all water from the reservoirs and/or refill containers and dry to protect the transducers from sitting idle in water for extended periods.

## Instructions for Manual Fill Containers

- Slide door assembly outwards to access the vapor-fire burner.
- Remove the plastic container.
- Manually fill the supplied container with 1 litre of water.
- Secure the top without twisting too tightly.
- Place the container back into position, the water in the container will drain into the reservoir which will fill to the level required for maximum operation (see picture 3 Page L).



# Warranty

CF + D

custom fireplace design

Quality Creativity Innovation

## Warranty

All CF + D and VITA | Fireplaces models are guaranteed against any defect in design, construction, or manufacture, and guaranteed to function properly for five (5) years from date of receipt of goods. The electrical and electronic components within the fireplace are warranted against any defect in design, construction, or manufacture, and guaranteed to function properly for one (1) year from date of commissioning. Our product guarantees are applicable only when our Fire Features have been installed with respect to all local building codes and with strict attention to the technical details outlined in our Plan Study as well as our installation, maintenance, and user's manuals. Our guarantee excludes accidental damages such as those occurring during transport without written notification upon receipt, damages incurred during installation, and damages resulting from improper use and is limited to the replacement of the defective part or unit in its entirety at the sole discretion of CF + D the manufacturer. This warranty does not include the reimbursement of labor cost or related costs incurred to conduct the replacement of parts or entire unit should it be deemed necessary.

We thank you for your support and your business!

**CF + D** | custom fireplace design  
5230 Harvester Rd. #2  
Burlington, Ontario L7L 4X4  
T: 905-681-3070  
Toll Free: 1-866-909-3070  
F: 905-681-8697  
[www.customfireplacedesign.com](http://www.customfireplacedesign.com)

North American Designed and Manufactured by **CF + D** | custom fireplace design

**VITA** | Fireplaces

2/4/19

# APPENDIX B- Vapor-Fire Service Manual

## Vapor-Fire

By

**CF + D** | custom fireplace design

## Service Manual

For Dimplex

Model(s)

CDFI1000-PRO

6909660300

CDFI500-PRO

6909660400



**IMPORTANT SAFETY INFORMATION:** Always read this manual first before attempting to service this cassette. For your safety, always comply with all warnings and safety instructions contained in this manual to prevent personal injury or property damage.

**CF + D** | custom fireplace design Inc.

5230 Harvester Rd

Burlington ON, CA L7L 4X4

1-866-909-3070

[www.customfireplacedesign.com](http://www.customfireplacedesign.com)

REV PCN DATE

00 - 21-12-15

In keeping with our policy of continuous product development, we reserve the right to make changes without notice.

7400880000R00

# TABLE OF CONTENTS

Operation.....	3
Maintenance.....	4
Exploded Parts Diagram.....	5
Replacement Parts List.....	5
Wiring Diagram.....	6
Switch Board Replacement.....	7
Terminal Block Replacement.....	7
Fan Assembly Replacement.....	8
Fused Wire Harness Replacement.....	8
Main Control Board Replacement.....	8
Power Supply Replacement.....	9
LED Light Assembly Replacement.....	10
Heating Element Replacement.....	10
Level Sensor Assembly Replacement.....	11
Solenoid Valve Replacement.....	12
Troubleshooting Guide.....	13

Always use a qualified technician or service agency to repair this cassette.


**! NOTE:** Procedures and techniques that are considered important enough to emphasize.

**⚠CAUTION:** Procedures and techniques which, if not carefully followed, will result in damage to the equipment.

**⚠WARNING:** Procedures and techniques which, if not carefully followed, will expose the user to the risk of fire, serious injury, or death.

## OPERATION

Figure 1

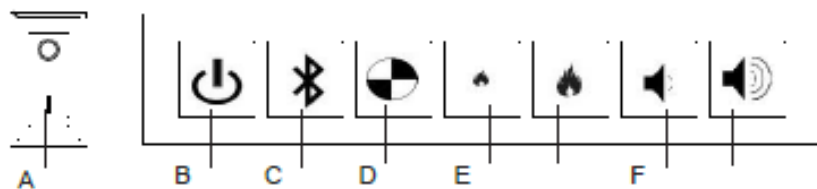

**WARNING:** This electric firebox must be properly installed before it is used.

The unit has two separate internal modules that are controlled by the settings entered on the left side (primary). Finer adjustment can be done using the controls on the right module to have both modules operating at the same

level (secondary).

There are three different control options available for the unit: manual (under the media tray), tethered controller (must be connected to the unit) and a remote control.

**NOTE:** When the unit is used in an environment where background noise is very low, it may be possible to hear a sound which is related to the operation of the flame effect. This is normal and should not be a cause for concern.

**NOTE:** Always ensure that the appliance is fixed to the framing in a level position.

### Controls

#### A . On/Off Switch

Supplies power to the unit.

**NOTE:** When the unit is first turned on the lights will come on and mist will appear 45 seconds later.

#### B . Standby

Puts the unit into standby mode where control by the tethered controller or remote is possible.

#### C . Blue tooth

Required for initializing the remote together, see initialization instructions for more detail.

#### D . Test Mode

Used for troubleshooting issues - outlined in detail in the service manual.

#### E . Flame Intensity Control

Adjusts the intensity of the flame and smoke effect when the unit has been activated.

Pressing the 🔥 will decrease the flame effect and pressing the 🔥 will increase the flame effect.

**NOTE:** A few moments will be required between adjustment and a change to the flame effect.

**NOTE:** During normal operation it is expected to see some condensation of water on the media tray. This will vary depending on ambient conditions and should be considered normal.

**NOTE:** When the water tank is empty the unit will turn off after 30 seconds.

Figure 2



Tethered Controller

**NOTE:** The icons with 1 dot indicate controls for the primary and 2 dots indicate controls for the secondary.

#### F. Volume Control

Adjusts the volume of the wood fire sound effects.

**On the unit:** Pressing the 🔊 will decrease the volume and pressing the 🔊 will increase the volume.

**On the Tethered Controller:** Pressing the 🔊 will turn On and Off the volume.

**The tethered controller** must be connected to the unit and On/Off Switch must be in the 'ON' (I) position in order to operate.

1. Install the tethered controller to the unit - plug into the port on the on the right module and run the wire out of the housing through the opening in the center of the back panel.
2. Place the On/Off Switch (Figure 1A) in the On ("I") position.
3. Press the blue tooth initialization button on the Primary controls (left side).
4. The unit will begin to beep and turn the lights on and off every 2 ½ seconds to indicate that the unit is in synchronization mode.
5. Within 20 seconds of pressing the blue tooth button, it will become visible by an enabled device (figure 2)  
**NOTE:** You will have only 20 seconds to perform this last step. Failure to do so will result in these steps needing to be followed again.
6. If the synchronization was successful the unit will go to Standby.

This will synchronize the enabled device and the fireplace receiver.

# Vapor-Fire Maintenance

**⚠ WARNING:** Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electric shock or damage to persons.

## Filling the water tank

When the water tank is empty, the flame effect shuts off and you will hear 2 audible beeps, follow these steps.

**⚠ CAUTION:** Allow at least five minutes for components to cool before disassembling the unit to refill.

1. Gently remove the top tray and place it carefully on the ground.
2. Turn the On/Off switch to the off position (0) (Figure 1A)
3. Remove the refill container by lifting upwards and outwards.
4. Refill the container with tap water.

**! NOTE:** Normal tap water can be used in the Vapor-Fire as long as the tap water is not considered to be hard water. In the event your tap water is hard, you may use softened water or distilled water with ¼ tsp. of salt (0.5 mL) added to the water reservoir. (The use of additional salt ~~blow the only~~ you notice that the unit is not producing mist as expected.)

5. Screw the cap back on, *do not overtighten*.
6. Return the refill container to the sump, with the tank cap facing down and the flat side of the tank facing outward.
7. Turn the On/Off switch to the off position (I). (Figure 1A)
8. Gently place the top tray back into position.

If you do not intend on using the unit for longer than 2

weeks, empty and drain the unit of water, and dry all of the water containing components.

## Transducer Replacement

After prolonged usage the ability for the unit to produce mist may become reduced. When this occurs the replacement of the transducer may be required. This unit comes with 2 additional transducers, located behind the right module, which can be installed when this occurs.

**! NOTE:** There is a small tab that holds the transducer in place, that needs to be released before it can be removed.

## Cleaning

It is recommended that the top cover assembly, sump and transducer are cleaned with soap and water on a *biweekly* basis.

**⚠ CAUTION:** Do not put plastic components in the dishwasher.

## Filter Cleaning

The air filters can be removed and gently rinsed with water to clean and dried on a towel before reinstalling.

**! NOTE:** Replace the filter so that the coarse black filter is facing the back of the unit.


## Surface Cleaning

Use a warm damp cloth only to clean surfaces of the unit. Do not use abrasive cleaners.

**! NOTE:** If you need to move the unit ensure that all of the components that contain water have been emptied before relocating.


## Servicing

Except for installation and cleaning described in this manual, an authorized service representative should perform any other servicing.

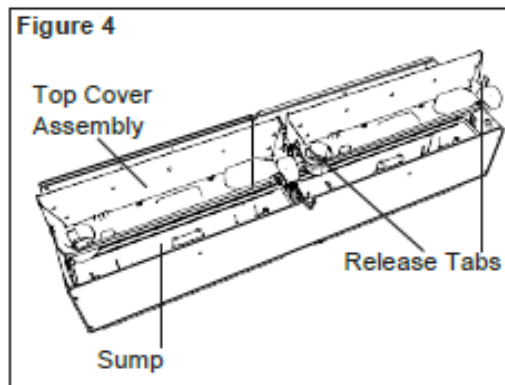




## EXPLODED PARTS DIAGRAM

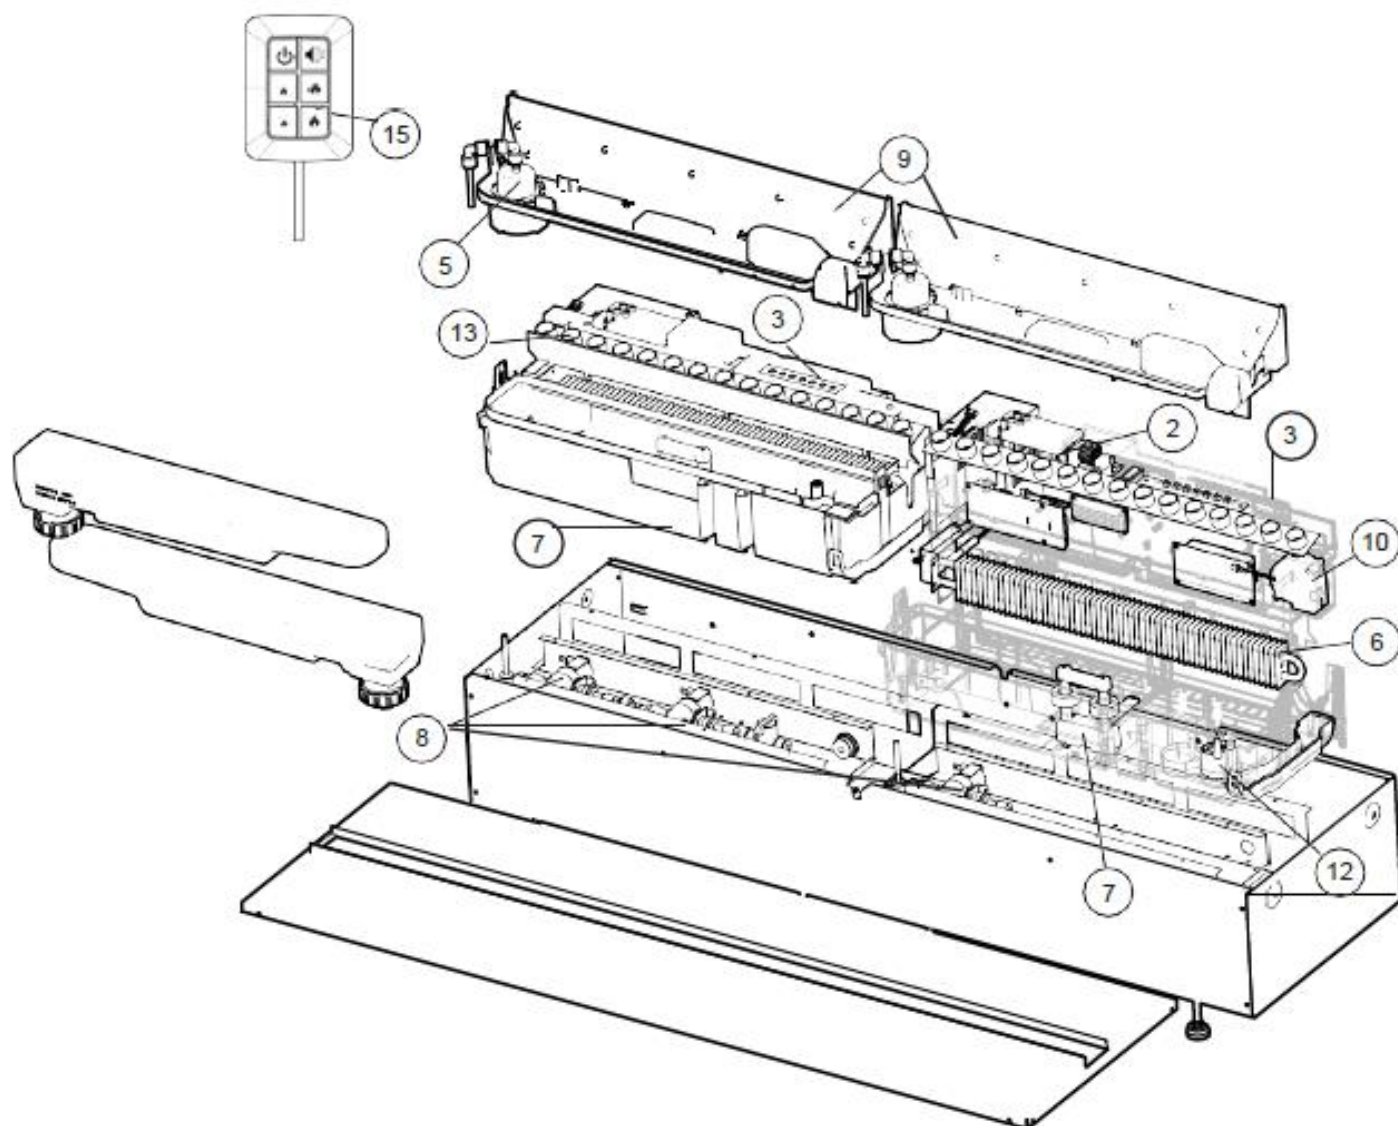

## REPLACEMENT PARTS LIST

1. Main Control Board .....	9601270100RP	11. Fan Filter .....	8600300100RP
2. Terminal Block .....	9601260100RP	12. Transducer .....	9601210100RP
3. Switch Board .....	9601290100RP	13. LED Light Assembly .....	9601250100RP
4. Power Supply .....	9601300100RP	14. N/A	
5. Fill Cap Assembly .....	9601230100RP	15. Tethered Controller / Receiver .....	9601120100RP
6. Heating Element .....	9601240100RP	16. Fused Wire harness .....	9601340100RP
7. Level Sensor Assembly .....	9601320100RP	17. Removable Refill Container with Cap. ....	9601350100RP
8. Solenoid Valve .....	9601330100RP	18. Log set Assembly .....	CDFILOG-KIT
9. Top Cover Assembly .....	9601220100RP	19. Plumbing Piercing Kit .....	CDFIPLUMB-KIT
10. Fan Assembly .....	9601310100RP		

## WIRING DIAGRAM

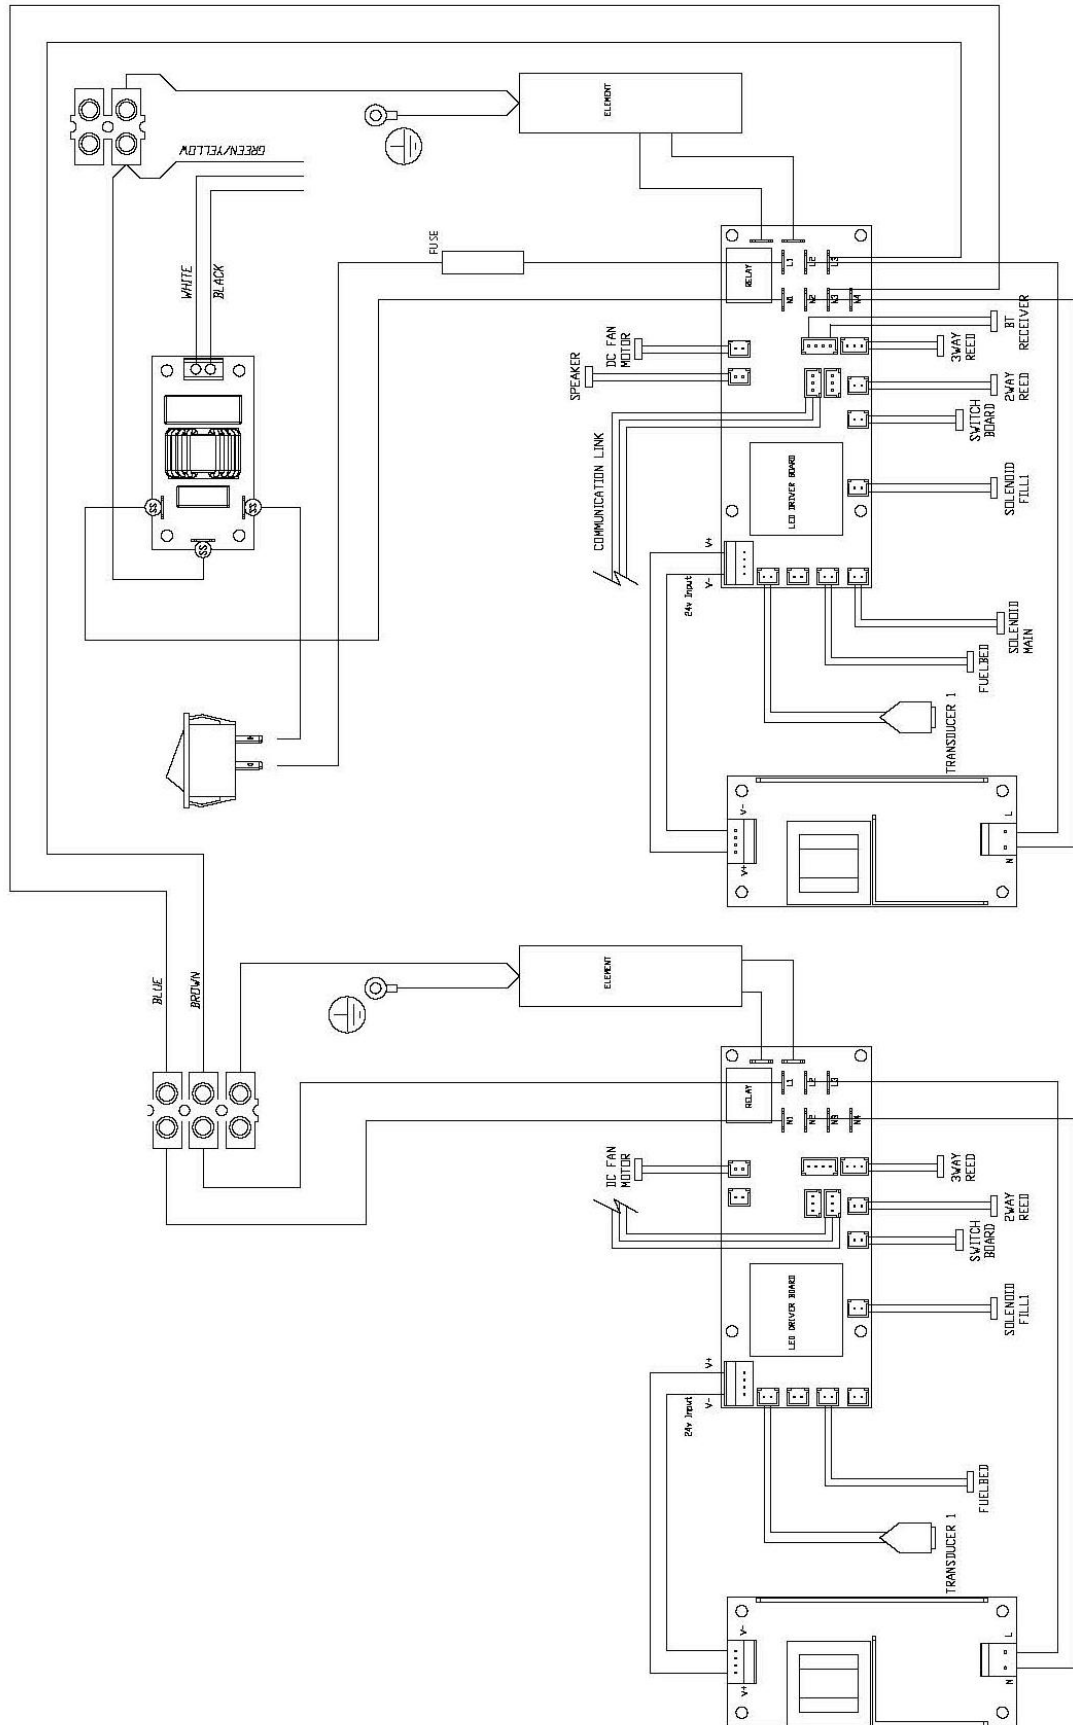

## SWITCH BOARD REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. On the side the replacement is required, remove the securing screws and metal wire cover.
3. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Locate the switch board to be replaced.
5. Gently lift the switch board off of the mounting stands.
6. Disconnect the wire connection from the back of the board.
7. Attach the wire connection to the new board and place on the mounting stands.
8. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## TERMINAL BLOCK REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.


**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. On the secondary side remove the securing screws and metal wire cover.
3. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Locate the terminal block to be replaced.
5. Disconnect the wire connections from the original block and install it on the new block.
6. Replace the terminal block in the original position - the terminal block is located so that it sits on the moulded pins on the surface below.
7. Re-assemble the remainder of the cassette in reverse order from the instructions above.

Figure 4

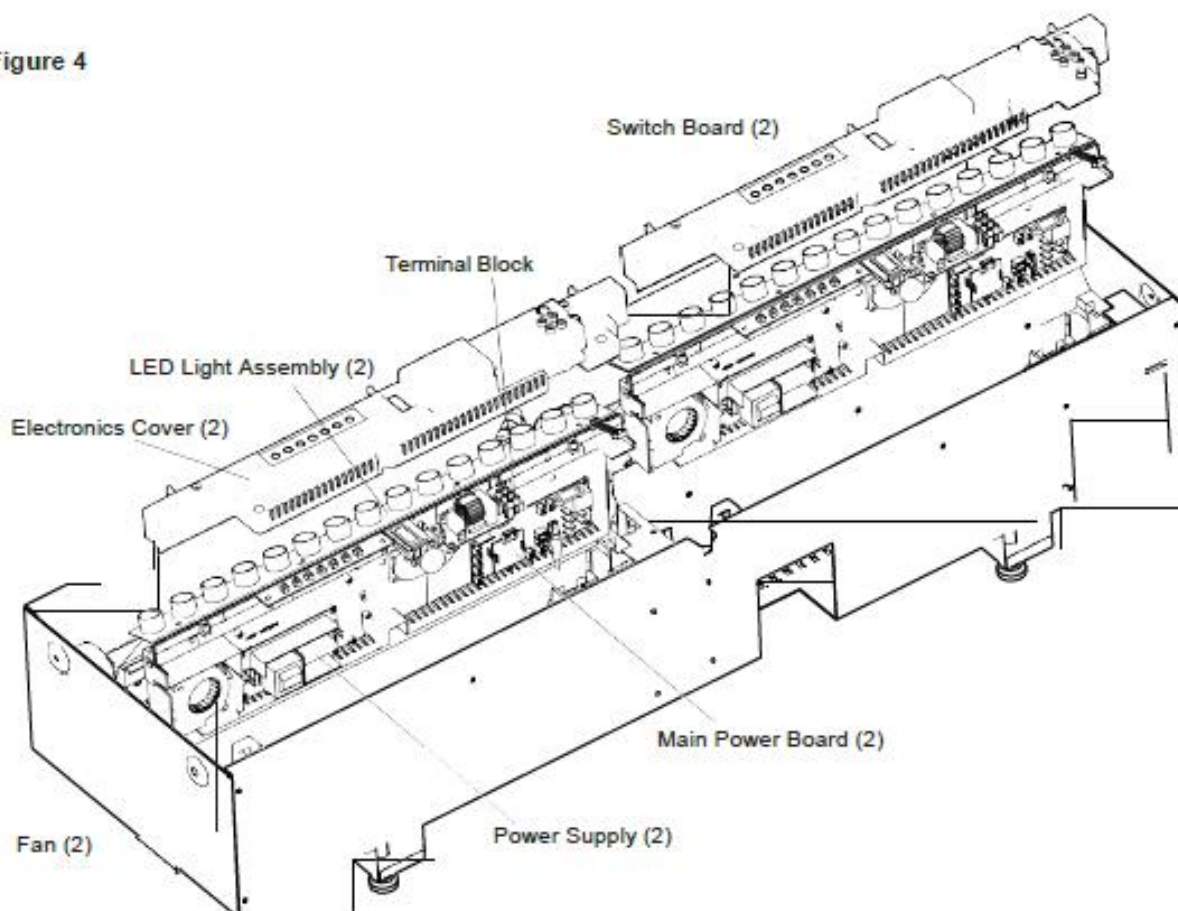



## FAN ASSEMBLY REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

5. Locate the fan assembly.
6. Trace the control wires to the main control board and disconnect.
7. Replace with wire from new fan.
8. Run wiring back to location for fan, and install the fan.
9. Reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

10. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### Secondary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

3. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

4. Locate the fan assembly.
5. Trace the control wires to the main control board and disconnect.
6. Replace with wire from new fan.
7. Run wiring back to location for fan, and install the fan.
8. Reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

9. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## FUSED WIRE HARNESS REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Remove the cable clamp, to allow for the assembly to be lifted out to better access the components.
5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

6. Locate the fused wire harness (brown wire from main switch to main control board with in line fuse).
7. Replace current wire harness with new wire harness.

**! NOTE:** A flat head screwdriver can be used to gently pry between the end of the connector and the switch to release the wires.

8. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

9. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## MAIN CONTROL BOARD REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Remove the cable clamp, to allow for the assembly to be lifted out to better access the components.
5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

6. Locate the main control board.
7. Transfer the wires from the old board to the new board.

**! NOTE:** A flat head screwdriver can be used to gently pry between the end of the connector and the switch to release the wires.

8. Remove the old board from the unit and replace with the new board.
9. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

10. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### Secondary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

3. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).
4. Locate the main control board.
5. Transfer the wires from the old board to the new board.

**! NOTE:** A flat head screwdriver can be used to gently pry between the end of the connector and the switch to release the wires.

6. Remove the old board from the unit and replace with the new board.
7. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal

block have not moved from their original locations and all wires are contained under the cover before reassembly.

8. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## POWER SUPPLY REPLACEMENT

**Tools Required:** Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Remove the cable clamp, to allow for the assembly to be lifted out to better access the components.
5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

6. Locate the power supply assembly.
7. Transfer the wires from the old board to the new board.

**! NOTE:** A flat head screwdriver can be used to gently pry between the end of the connector and the switch to release the wires.

8. Remove the old board from the unit and replace with the new board.
9. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

10. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### Secondary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

3. Holding the assembly at either end of the LED light



strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

4. Locate the power supply assembly.
5. Transfer the wires from the old board to the new board.

**! NOTE:** A flat head screwdriver can be used to gently pry between the end of the connector and the switch to release the wires.

6. Remove the old board from the unit and replace with the new board.
7. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

8. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## LED LIGHT ASSEMBLY REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Remove the cable clamp, to allow for the assembly to be lifted out to better access the components.
5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

6. Gently lift the LED light assembly off of the standoffs.
7. Trace the control wire back to the main control board and replace with the wire from the new assembly.
8. Install the new LED light assembly, ensuring that all of the wires are installed in the same location as the previous one.
9. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all

wires are contained under the cover before reassembly.

10. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### Secondary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)  
**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.
3. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).
4. Gently lift the LED light assembly off of the standoffs.
5. Trace the control wire back to the main control board and replace with the wire from the new assembly.
6. Install the new LED light assembly, ensuring that all of the wires are installed in the same location as the previous one.
7. Replace all of the wiring to their original locations and reinsert the electronics assembly.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

8. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## HEATING ELEMENT REPLACEMENT

Tools Required: Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)  
**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.
4. Remove the cable clamp, to allow for the assembly to be lifted out to better access the components.
5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

6. Locate the 2 screws that secure the element assembly (element and brackets) to the unit and remove.
  7. Lift the element assembly out of the unit.
  8. Disconnect the element from the main control board.
  9. Remove the element from the mounting bracket and install the new element.
  10. Attach the new element to the main control board.
  11. Install and secure the element assembly into the unit.
  12. Replace all of the wiring to their original locations and reinsert the electronics assembly.
- ⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.
13. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### Secondary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
  2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)
- ! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.
3. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).
  4. Locate the 2 screws that secure the element assembly (element and brackets) to the unit and remove.
  5. Lift the element assembly out of the unit.
  6. Disconnect the element from the main control board.
  7. Remove the element from the mounting bracket and install the new element.
  8. Attach the new element to the main control board.
  9. Install and secure the element assembly into the unit.
  10. Replace all of the wiring to their original locations and reinsert the electronics assembly.
- ⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all

wires are contained under the cover before reassembly.

11. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## LEVEL SENSOR ASSEMBLY REPLACEMENT

Tools Required: Phillips head screwdriver


**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### Primary Side

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
  2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
  3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)
- ! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.
4. Remove the cable clamp, to allow for the assembly to be lifted out to better access the components.
  5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).
- ! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.
6. Remove the refill bottle, top cover, transducer and sump.
  7. Locate the level sensor assembly. (Figure 5)
  8. Trace and disconnect the control wire for the level sensor assembly back to the main control board.
  9. Depress the two tabs along the one side of the assembly and slide the level sensor and wire out.

Figure 5

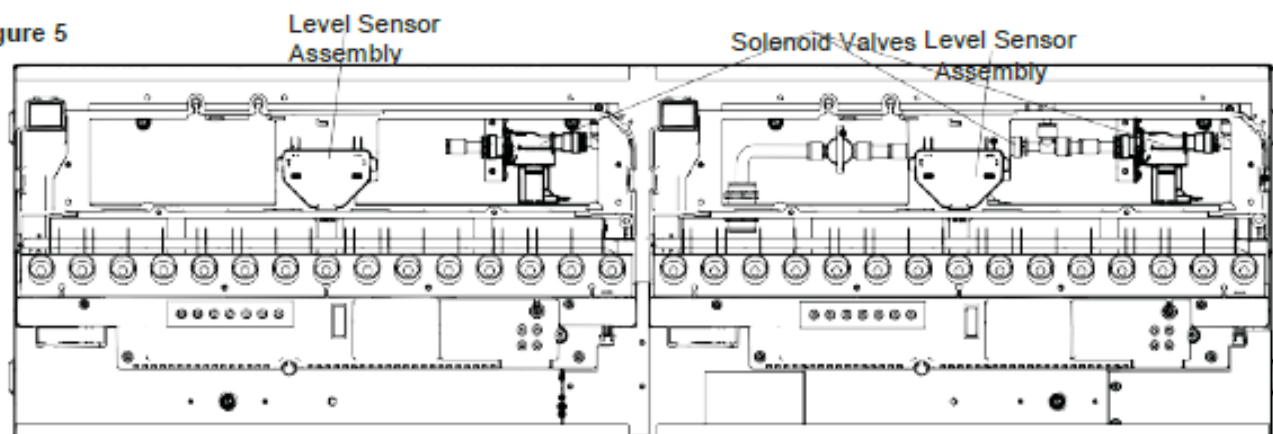



10. Run new wire through to main control board.
11. Install new level sensor.
12. Reconnect the control wire.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

13. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### **Secondary Side**

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

3. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).
4. Remove the refill bottle, top cover, transducer and sump.
5. Locate the level sensor assembly. (Figure 5)
6. Trace and disconnect the control wire for the level sensor assembly back to the main control board.
7. Depress the two tabs along the one side of the assembly and slide the level sensor and wire out.
8. Run new wire through to main control board.
9. Install new level sensor.
10. Reconnect the control wire.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

11. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## **SOLENOID VALVE REPLACEMENT**

**Tools Required:** Short Phillips head screwdriver

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or damage to persons.

**! NOTE:** Ensure that all of the components that contain water have been emptied and source water has been turned off before performing any maintenance.

### **Primary Side**

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the securing screws and metal wire cover at the end of both of the electronics covers.
3. Remove the 4 screws and both of the electronics covers from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

4. Remove the cable clamp, to allow for the assembly to

be lifted out to better access the components.

5. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).

**! NOTE:** There are several wires that run between the two sides, these wires will need to be gently removed through the opening on the secondary side to allow the primary electronics assembly to be lifted out.

6. Remove the refill bottle, top cover, transducer and sump.
7. Locate the solenoid valve to be replaced. (Figure 5)
8. Trace and disconnect the control wire for the solenoid back to the main control board.
9. Remove the two screws from the front face of the bracket to release the valve.
10. Disconnect the plumbing connections and remove the solenoid valve.
11. Run new wire through to main control board.
12. Install new solenoid valve.
13. Reconnect the control wire.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

14. Re-assemble the remainder of the cassette in reverse order from the instructions above.

### **Secondary Side**

1. Disconnect and remove the media tray or log set from the unit and put them in a safe place.
2. Remove the 4 screws and the electronics cover from the unit. (Figure 4)

**! NOTE:** Use caution when removing the electronics cover, to prevent strain on the connector wire attached to it.

3. Holding the assembly at either end of the LED light strip, on the primary end, gently lift the electronics assembly out of the unit (Figure 4).
4. Remove the refill bottle, top cover, transducer and sump.
5. Locate the solenoid valve to be replaced. (Figure 5)
6. Trace and disconnect the control wire for the solenoid back to the main control board.
7. Remove the two screws from the front face of the bracket to release the valve.
8. Disconnect the plumbing connections and remove the solenoid valve.
9. Run new wire through to main control board.
10. Install new solenoid valve.
11. Reconnect the control wire.

**⚠ CAUTION:** Ensure that the switchboard and terminal block have not moved from their original locations and all wires are contained under the cover before reassembly.

12. Re-assemble the remainder of the cassette in reverse order from the instructions above.

## TROUBLESHOOTING GUIDE

**\*\* After the unit has shut down due to an error, a full reset of the unit will be required by turning the unit Off with the On/Off switch for 60 seconds then turning back On.**

PROBLEM	CAUSE	SOLUTION
<b>General</b>		
Unpleasant smell when unit is used.	Dirty or stale water.	Clean the unit as described under maintenance.
<b>Appearance</b>		
Fireplace does not turn on Manually (unit does not beep when switch turned)	Improper operation	Refer to Operation Section
	No incoming voltage from the electrical wall socket	Check Fuse/Breaker Panel
	Defective main control board	Replace main control board
Only one side of the unit is operating	Tethered controller not installed correctly	Ensure that connection has clicked into place
	Put unit in troubleshooting mode to test any of the functions listed	If none of the tests are working, replace the main control board
Fireplace does not turn on with the Remote Control	Improper operation	Refer to Operation Section
	The batteries in the remote control are dead	Install new battery into the remote control
	Tethered controller not installed correctly	Ensure that connection has clicked into place
	Remote not initialized with the unit	Initialize remote to unit. Unit will flash on and off during initialization, completion will be indicated with 5 beeps
	Remote signal is not being received by tethered controller	Ensure that tethered controller is in an open area that can receive signal from remote control
	Defective remote control (blue light on end of remote does not turn on when buttons are pressed)	Replace remote control
	Defective tethered controller	Replace tethered controller
The flame effect has too much smoke or is coming out too fast	Flame effect control is set too high	Adjust the flame height on both the secondary and/or primary controls
	Filter is missing off of Fan Housing	Replace Fan Filter
Mist is not coming out evenly	Condensation building up on the mist outlet	Remove the build up of condensation
	Unit is not level	Adjust the feet under the unit to ensure that the unit has been installed level, front to back and side to side
	Media is blocking air flow	Rearrange media to ensure mist outlet is not being blocked
	The transducer is not operating correctly - put the unit in troubleshooting mode to test the transducer	If the transducer is running, ensure that the emitter is clean and free of calcium deposits or scaling If the transducer is not running, replace the transducer with the provided additional transducer
The flame effect is too low	Flame effect control is set too low	Adjust the flame height on both the secondary and/or primary controls
	Verify that the unit is receiving 72 in <sup>2</sup> (460 cm <sup>2</sup> ) of air	Enlarge area for air to enter unit
	The fan is not operating correctly - put unit in troubleshooting mode to test the fan	If the fan is not running, replace fan assembly If the fan is running, ensure that the air filter is clean and dry
	The heating element is not operating correctly - put unit in troubleshooting mode to test the operation of the heating element	Replace the heating element
Unit is blinking every 8 seconds and is not operating	Water level in reservoir is too high **	Remove enough water from reservoir so that level is below maximum level
	The solenoids are not operating correctly - put unit in troubleshooting mode to test the operation of the solenoids	If the solenoids are not working, replace the solenoid

PROBLEM	CAUSE	SOLUTION
<b>Appearance Continued</b>		
Flame effect will not start - unit being operated with <i>refill bottle</i>	Improper operation	Mist will begin emitting out of the unit after 45 seconds of operation
	Low water level indicator and lights continuously blink twice **	Turn the unit off with the On/Off switch, refill the refill container and turn the unit back on
		Ensure that water bottle is level and positioned so that the water can easily flow to the water reservoir
		Manually fill the reservoir to the maximum line and if issues persists replace the level sensor assembly
	Water in unit is too cold	Allow water to warm to room temperature.
	Cord is located over emitter on transducer	Relocate cord so that mist is free to rise off of transducer.
	Transducer is not installed correctly	Ensure that the connection has clicked into place
	If using distilled or reverse osmosis water, unit will not produce a consistent mist	Add 1/8 tsp of table salt to water reservoir to introduce electrolytes, only repeat when mist is not being produced correctly
	The transducer is not operating correctly - put the unit in troubleshooting mode to test the transducer	If the transducer is running, ensure that the emitter is clean and free of calcium deposits or scaling
		If the transducer is not running, replace the transducer with the provided additional transducer
Flame effect will not start - unit <i>hard plumbed</i> to water source	Improper operation	Mist will begin emitting out of the unit after 45 seconds of operation
		Transducer is not installed correctly
		Relocate cord so that mist is free to rise off of transducer.
	Low water level indicator and lights continuously blink twice **	Turn the unit off with the On/Off switch, remove the top cover assembly, verify that ball valve is open, none of the water connections are leaking and supply water has not been turned off
		Manually fill the reservoir to the maximum line and if issues persists replace the level sensor assembly
	The solenoids are not operating correctly - put unit in troubleshooting mode to test the operation of the solenoids	If the solenoids are not working, replace the solenoid
	The transducer is not operating correctly - put the unit in troubleshooting mode to test the transducer	If the transducer is running, ensure that the emitter is clean and free of calcium deposits or scaling
		If the transducer is not running, replace the transducer with the provided additional transducer
	The fan is not operating correctly - put unit in troubleshooting mode to test the fan	If the fan is not running, replace fan assembly
		If the fan is running, ensure that the air filter is clean and dry
Water is appearing around the unit	During normal operation it is expected to see some condensation of water on the media tray.	If condensation is present ensure that mist outlets are unobstructed
		Certain ambient conditions will cause condensation on the unit and in most cases will only occur on initial start up of the unit
Water is appearing beneath unit	Connections are leaking	Ensure that all water connections are tight and fully inserted
	Incoming water pressure is too high (only applicable on hard plumbed units)	Reduce water pressure to below 58 psi (8 bar)










 
PROBLEM	CAUSE	SOLUTION
<b>Appearance Continued</b>		
Unit is blinking every 8 seconds and is not operating	Water level in reservoir is too high **	Remove enough water from reservoir so that level is below maximum level
	The solenoids are not operating correctly - put unit in troubleshooting mode to test the operation of the solenoids	If the solenoids are not working, replace the solenoid
LED lights do not come on when unit is turned on	Defective LED light strip - put unit in troubleshooting mode to test the LED lights	Replace LED Light strip

## Troubleshooting Mode

The unit has a built-in troubleshooting mode to assist with determination of issues.

To put the unit in troubleshooting mode:

1. Place the unit in standby off (the toggle switch in the On position and everything else Off).
2. Press the troubleshooting button  (Figure 1D) on the side that the testing is required, unit will beep.
3. Press the following buttons to test functionality of listed components - press once will turn On and press again to turn off

	Component Test	Expected Functionality
	LED Driver	Lights turn On
	Sound	Crackling sound will turn On
	Fan	Fan will turn On
	Transducer	Transducer will turn On and bubbling will be seen coming out of the transducer
	Solenoids	Solenoids will turn On (the main solenoid coming in and the solenoid on the side being tested)
	Heater Relay	Relays will be activated to turn the heating element on, a quiet clicking noise can be heard
	Fuel Bed	LED's in fuel bed will turn On

4. After 15 seconds of inactivity the unit will beep and then return to regular Standby mode, or the On/Off button can be switched to Off to end the troubleshooting mode.

**VAPOR-FIRE** Systems  
are Design Built by CF + D custom  
fireplace design inc.  
Engines provided by Dimplex North  
America Ltd.



**CF + D** | custom fireplace design  
5230 Harvester Rd. Unit #2 Burlington, Ontario Canada  
L7L 4X4 t. 1-866-909-3070 t. 905-681-3070  
[www.customfireplacedesign.com](http://www.customfireplacedesign.com)